
















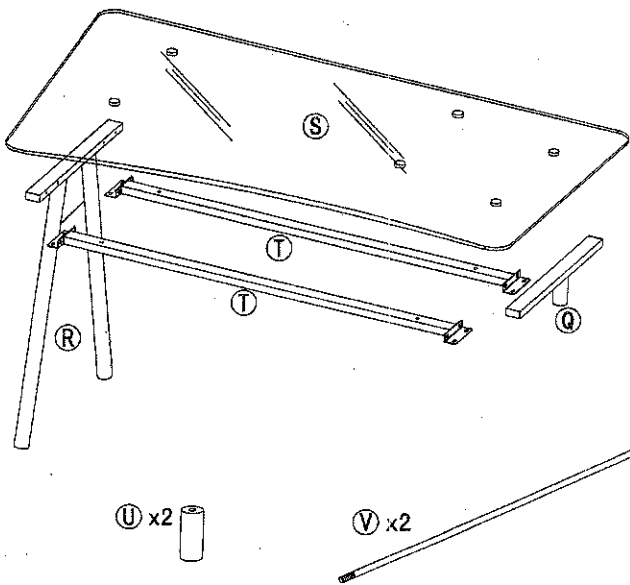
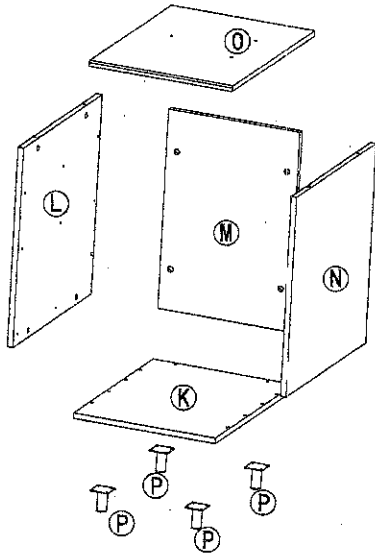
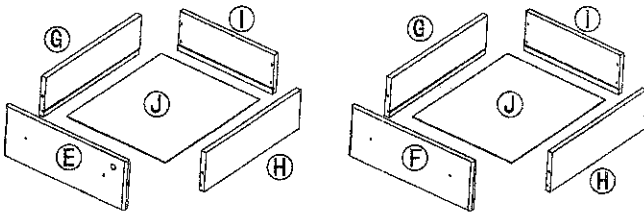
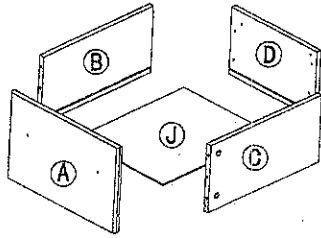
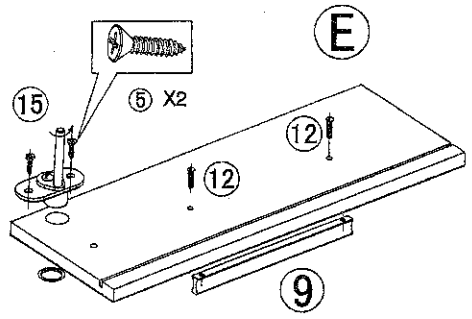


IMPORTANT: DON'T FASTEN BOLTS UNTIL ALL PARTS IN POSITION.


①	 M5.5x55X4	②	 M6x25X4	③	 M6x30X3
④	 M6x12X16	⑤	 M4x14X56	⑥	 X16
⑦	 M8X2	⑧	 Left Right X3	⑨	 X3
⑩	 X10	⑪	 X3	⑫	 M4x18X6
⑬	 M6x20X2	⑭	 4x35X12	⑮	 X1
⑯	 X1	⑰	 X3		





Drawer (1)









Drawer (2)

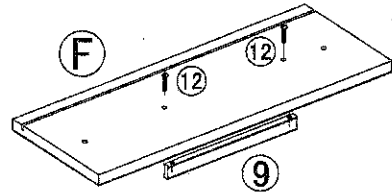


Drawer (3)

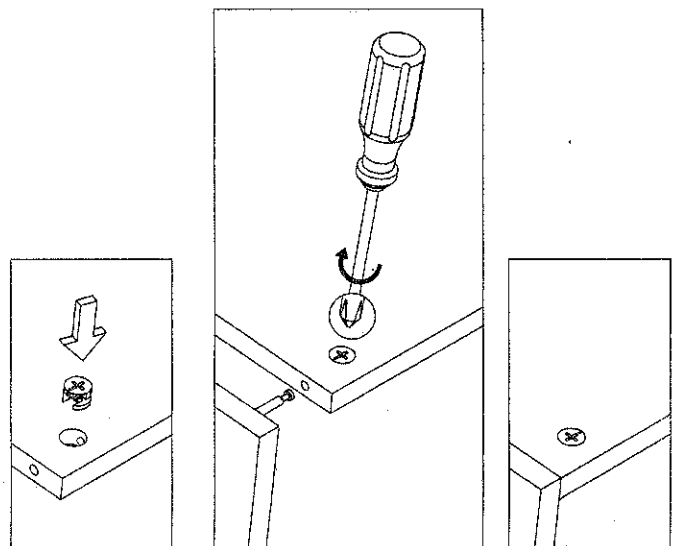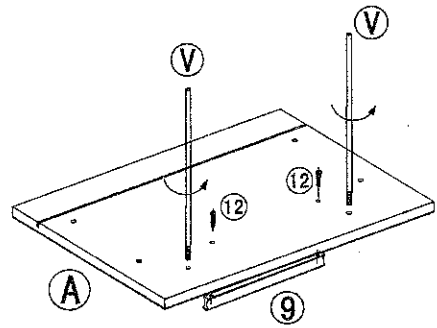


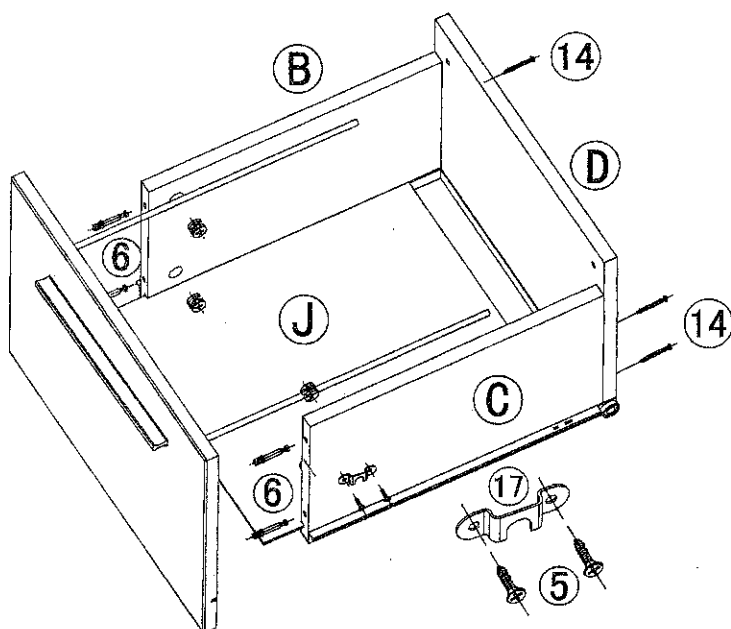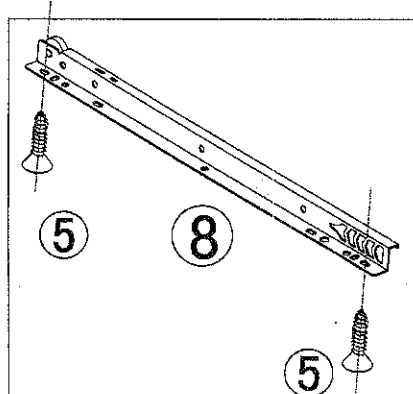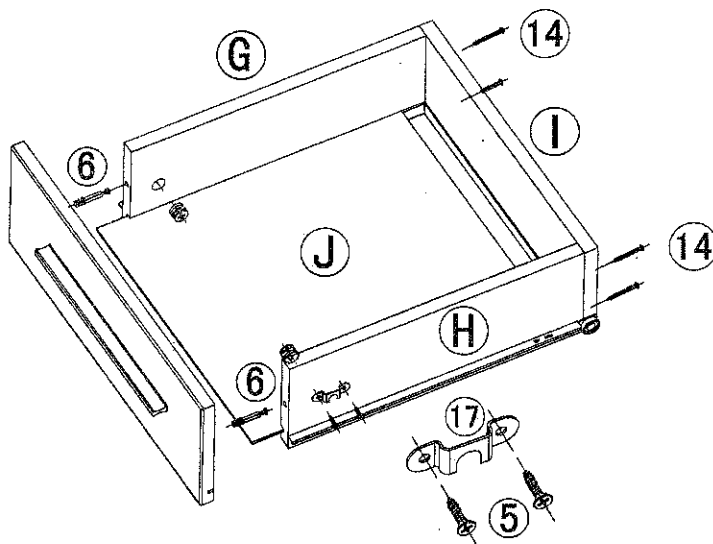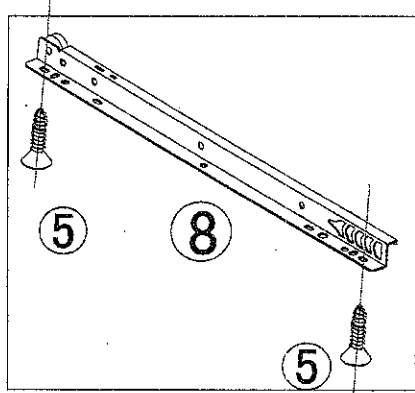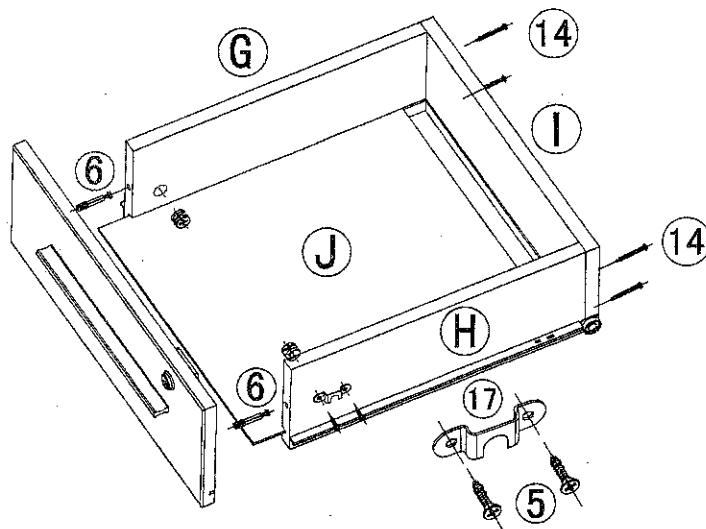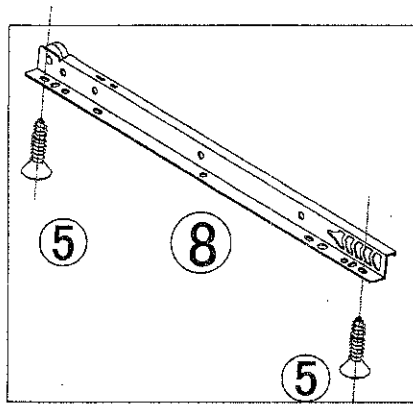


1.

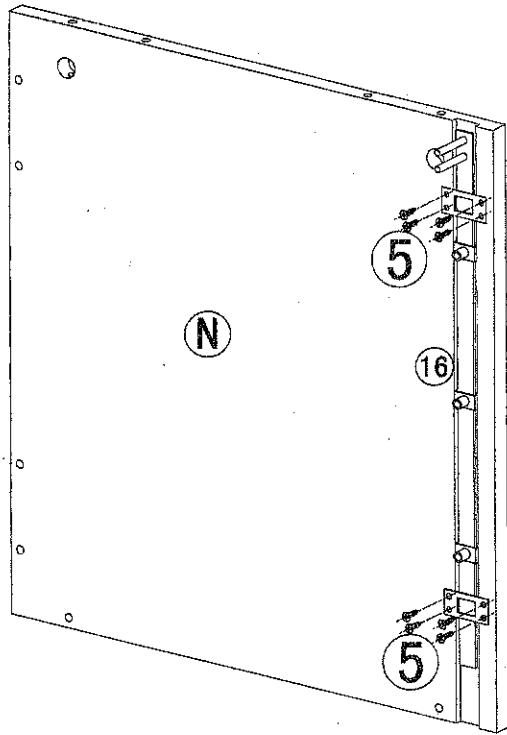


2.

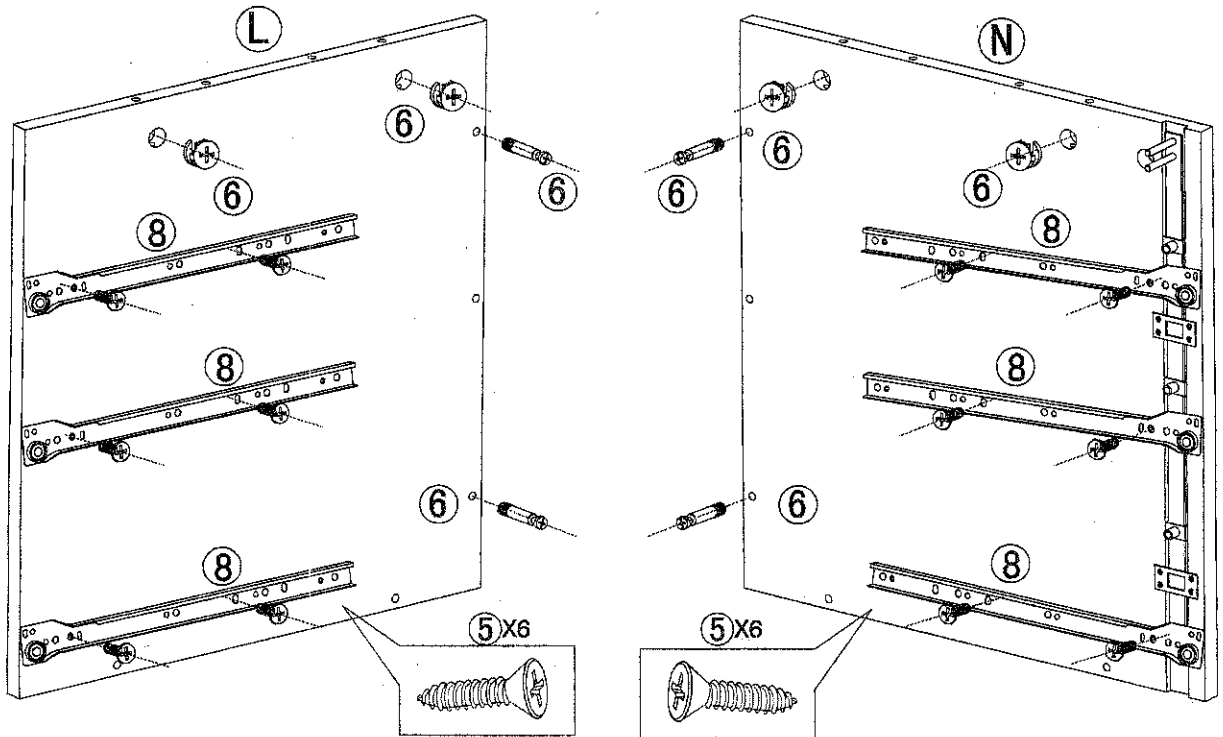


3.

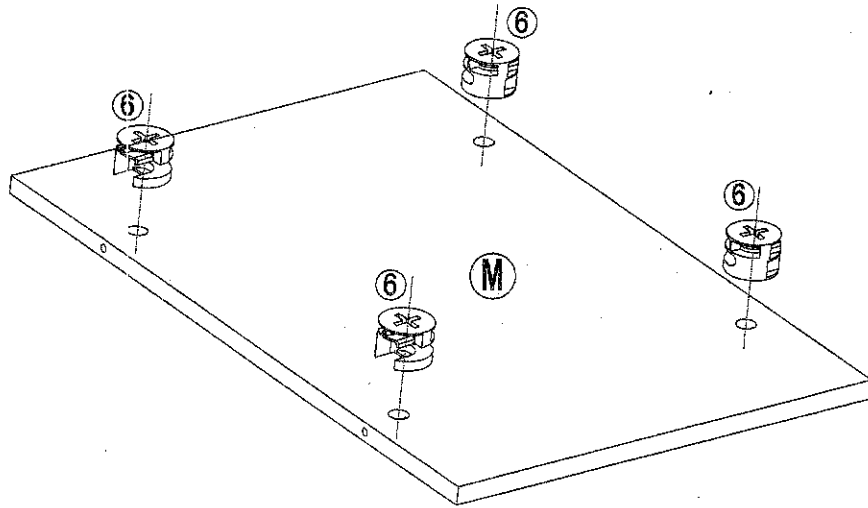


4.

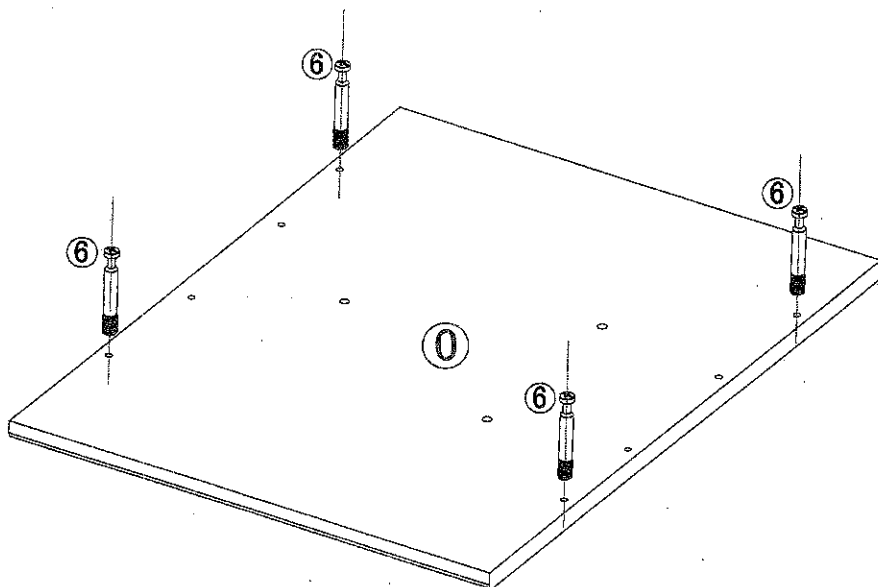


5.

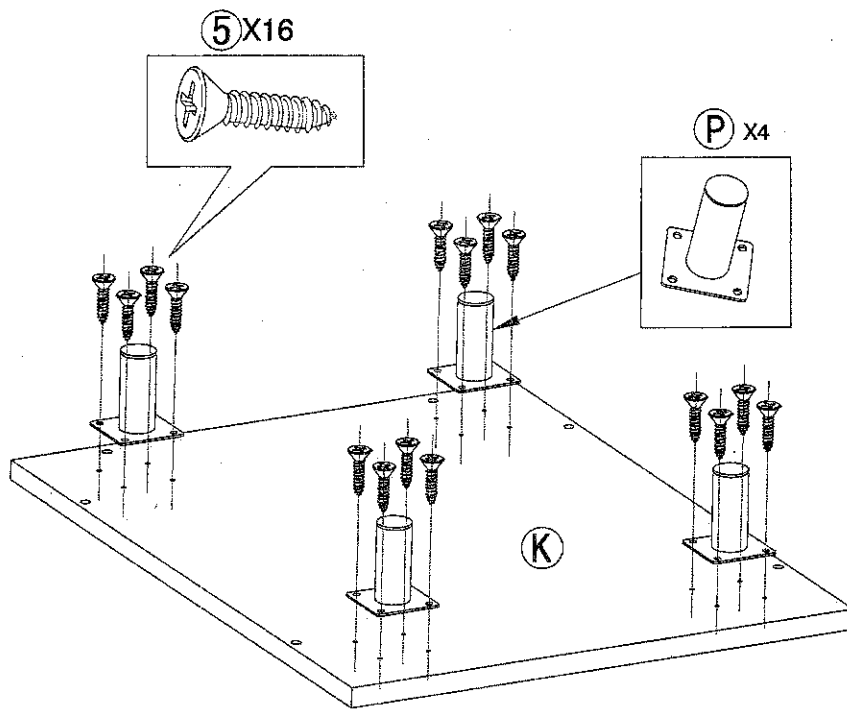


6.

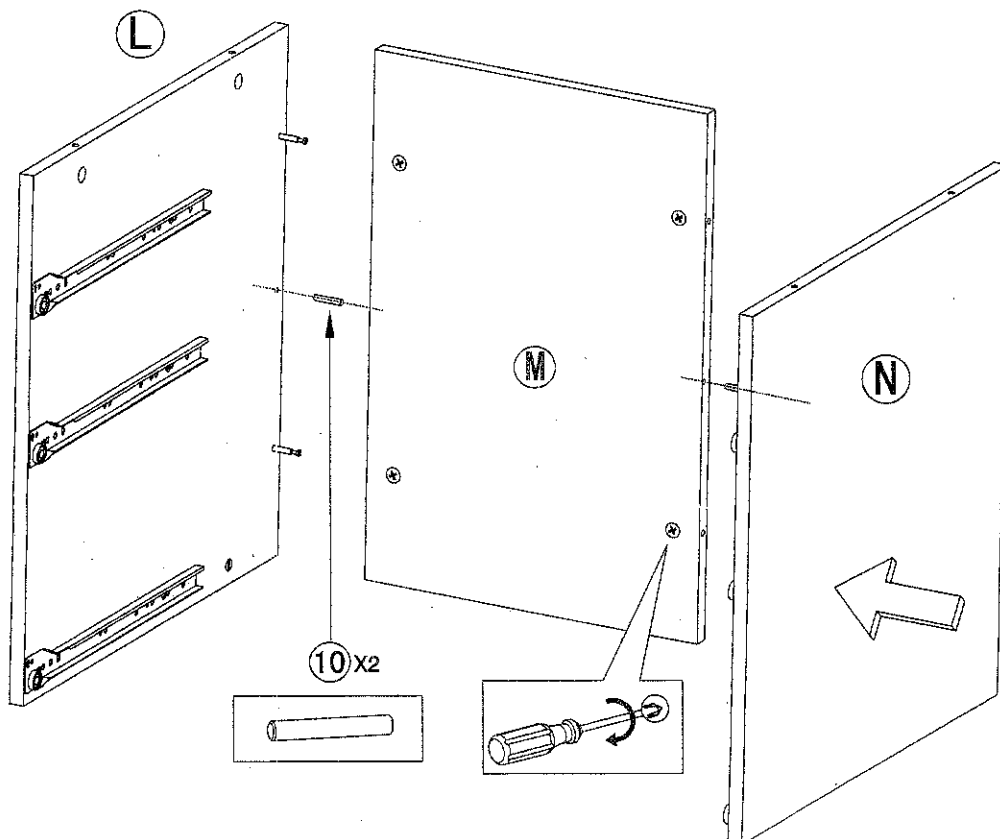


7.

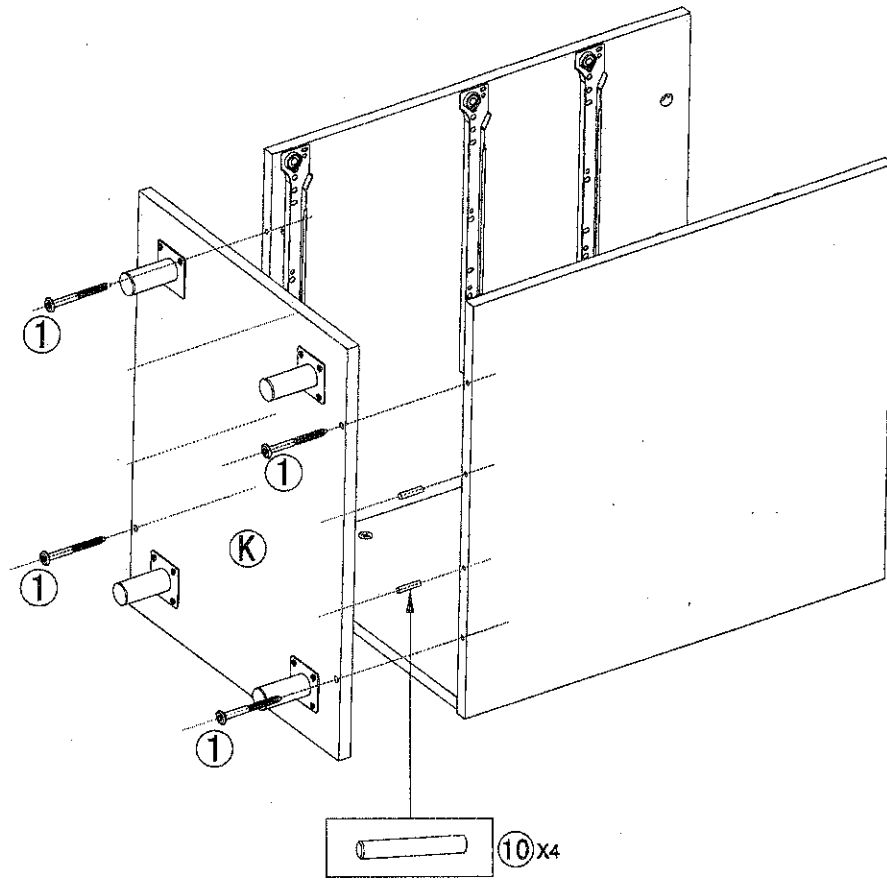


8.

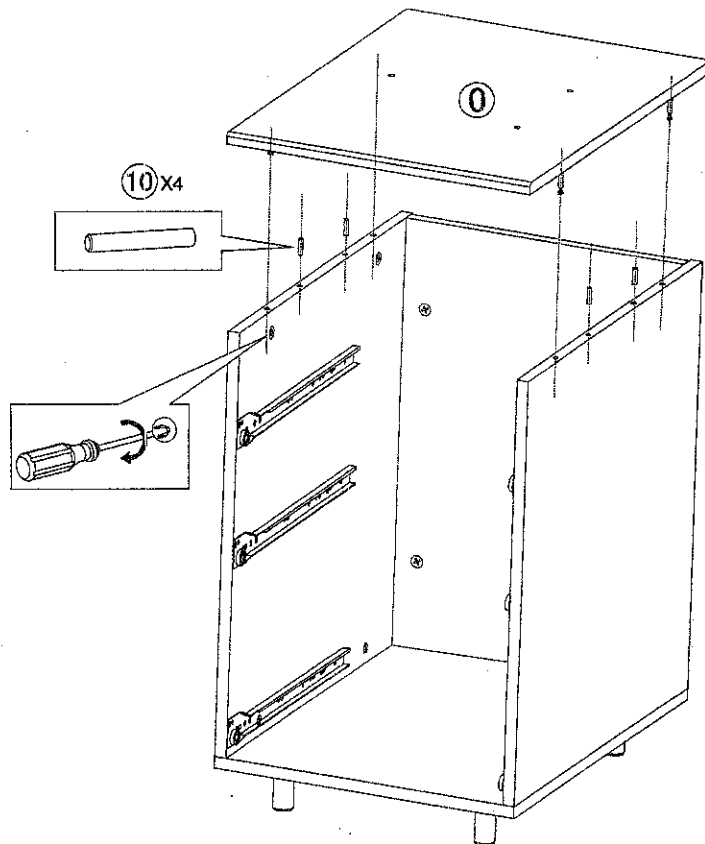


9.

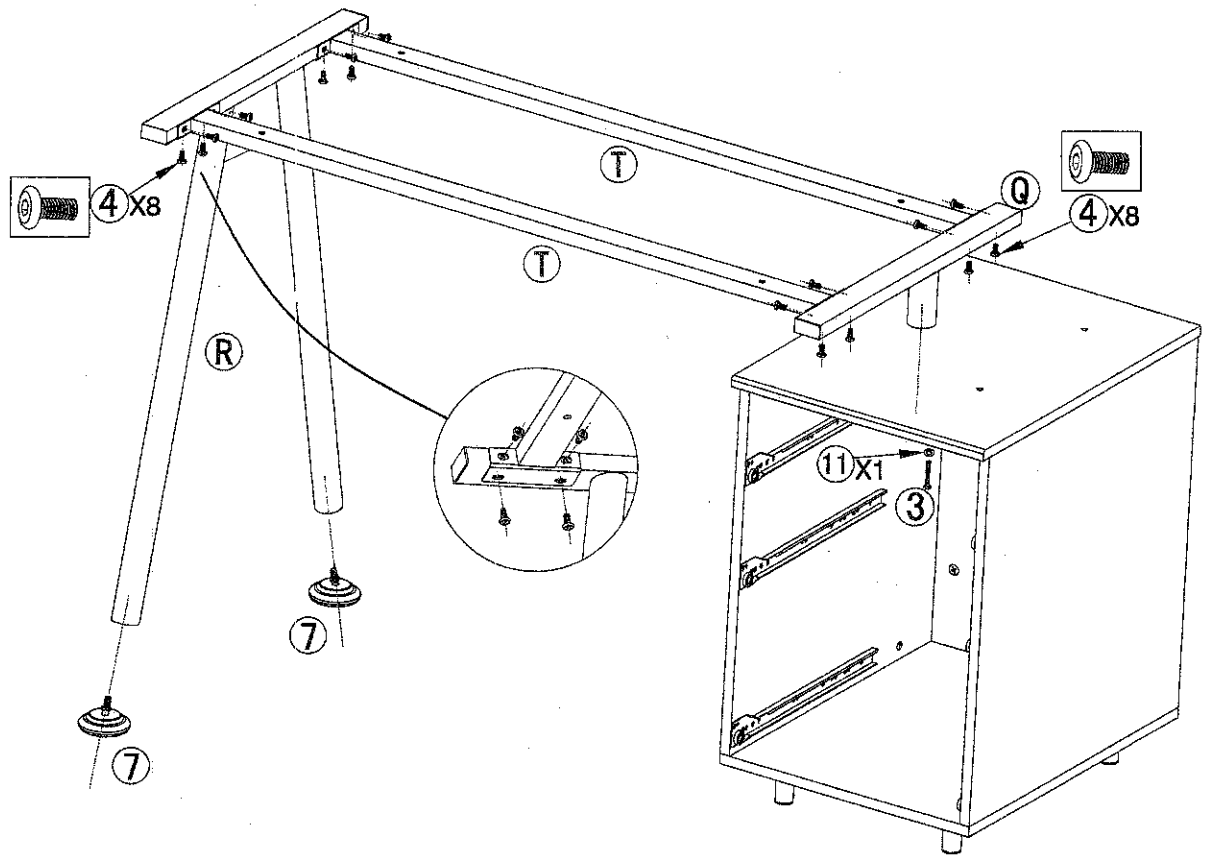

10.

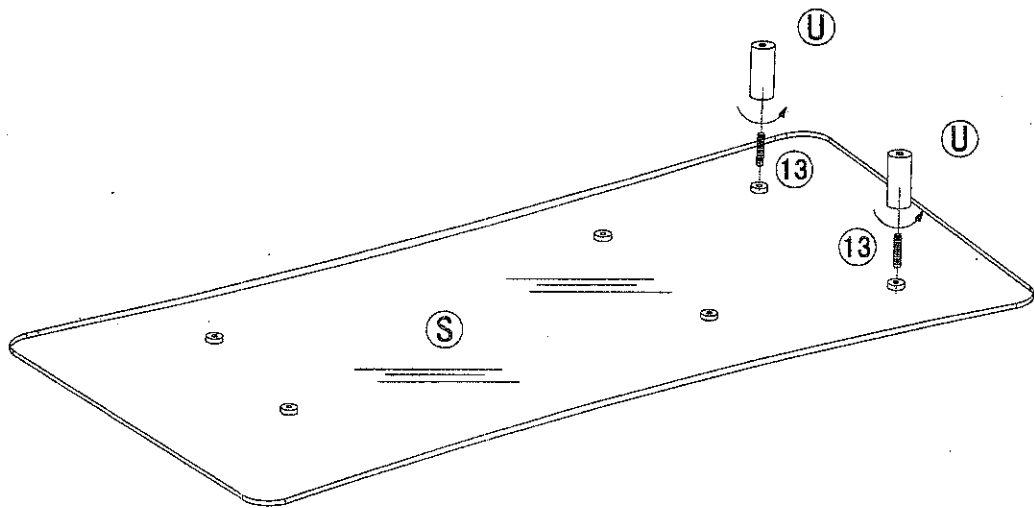

11.

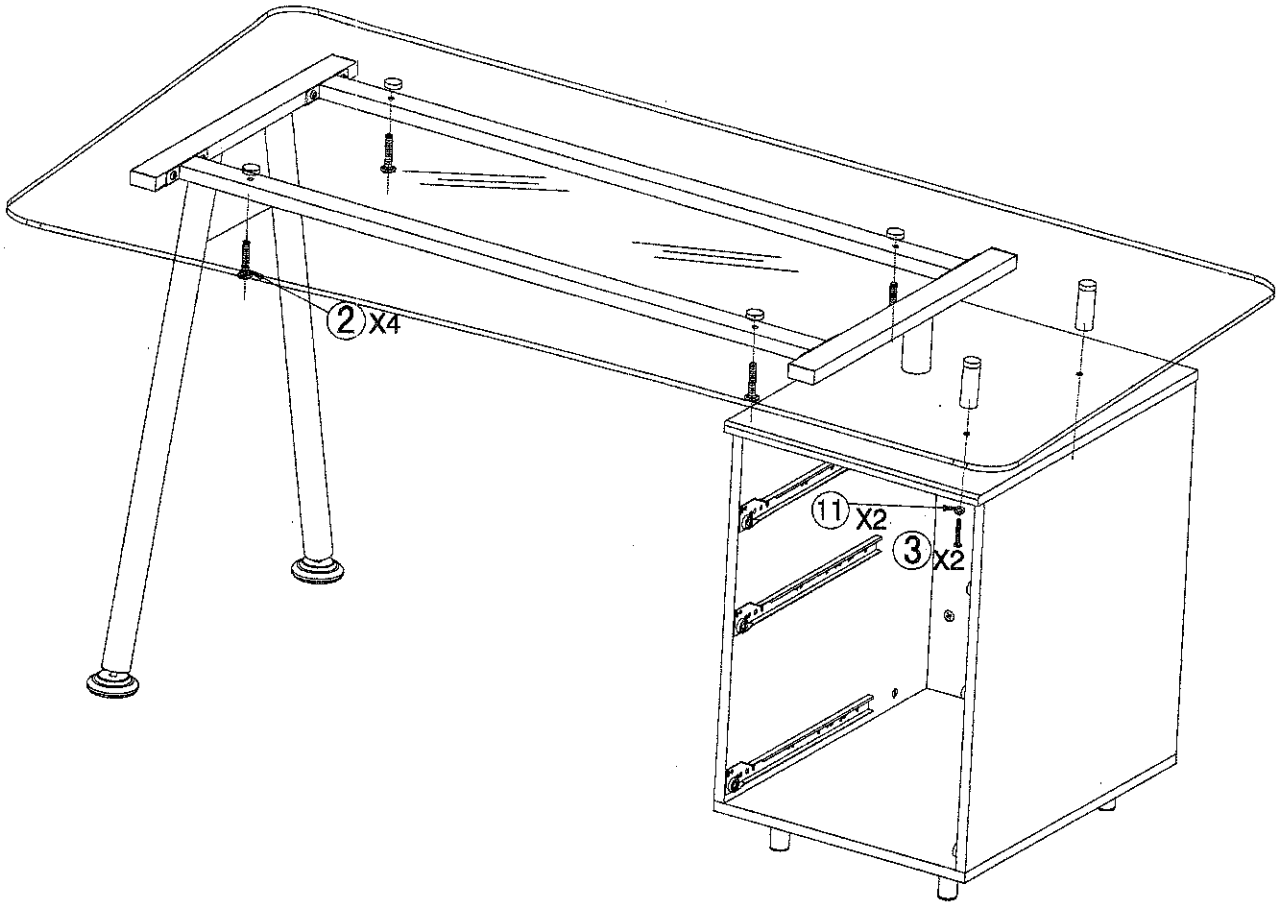

12.

